



ADVER-FLAG

RECTANGLE SERIES GROUND STAND ASSEMBLY INSTRUCTIONS




MADE IN CANADA

PARTS

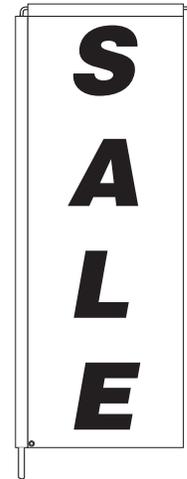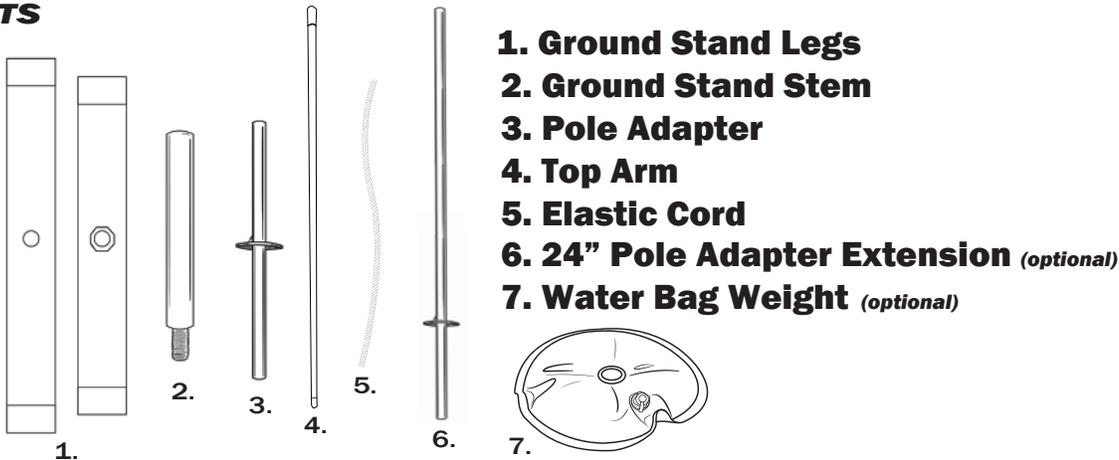


ASSEMBLY


1. Stack poles together to assemble, leaving the 90° bent piece off. (DO NOT TELESCOPE POLE). Once assembled, pull flag all the way down the pole, so that you can now attach the remaining piece. Next, slide the flag back up to the top of the pole.

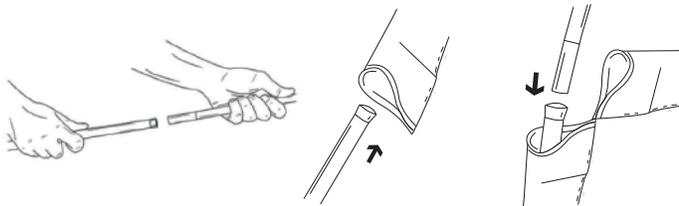


2. Connect the Top Arm of the pole by sliding it through the top pocket and out the small opening on the closed end. Ensure the Top Arm sits inside the closed pocket once connected.

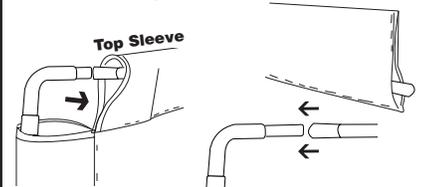


3. Take the Elastic Cord, fold in half and loop through grommet on flag. Pull flag and cord down until snug on pole. Once placement is decided, pull cord down toward the anchors, and wrap tightly under both anchors until secure.

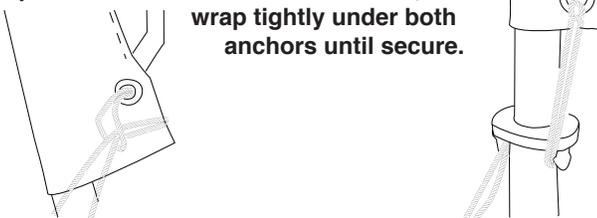


4. Next, set the Ground Stand Legs across one another with the nut of the leg facing the ground.

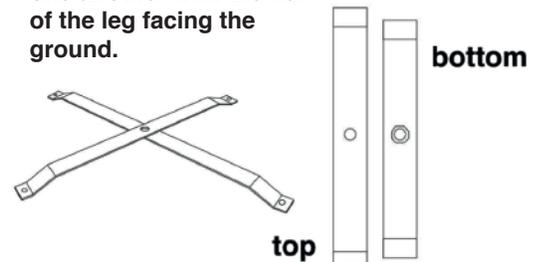

5. With the nut on the bottom of the stand, screw the Ground Stand Stem into place securing both legs together in an "X" position.

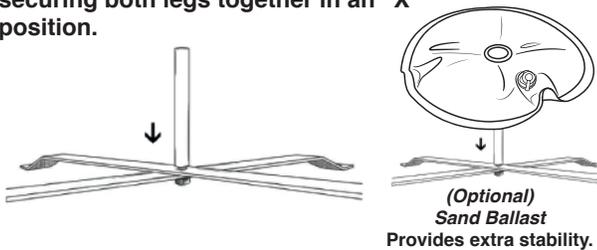

6. Place the Pole Adapter into the Ground Stand Stem, and then place the flag onto the Pole Adapter. Note: If using the 24" Pole Adapter Extension, insert it into Ground Stand Stem, then place the Pole Adapter and flag atop of the Extension.

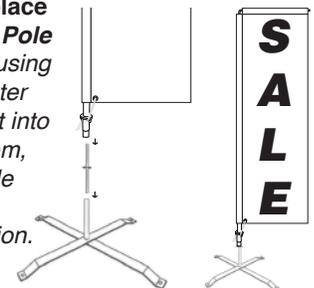

! GUIDES AND PRECAUTIONS !

- Flag system may be damaged in winds exceeding 35 km/hr.
PLEASE DO NOT USE IN INCLEMENT WEATHER.

- Do not use near overhead wires, if not used correctly it may result in injury or death.

- Must have rotational movement. Keep at least 5ft away from any objects to increase life expectancy of flags. IE Fences, Trees, Buildings Etc.